


# WOOD FLOOR INSTALLATION

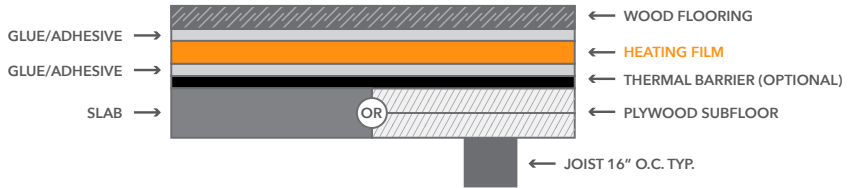

1. Prepare the Heating Film according to the steps in the General Installation Instructions beginning on page #24.
2. Adhere the Heating Film to the slab or sub-floor using a moisture resistant or water proofing indoor/outdoor flooring adhesive by rolling back 1/2 a sheet at a time, using a 3/16"-1/4" (5-6mm) V-notch trowel to apply adhesive to the floor, setting the Heating Film down onto the adhesive. Using a roller, apply a continuous, even pressure with overlapping strokes making a permanent bond between the sub-floor and film.
3. To help acclimate the wood flooring to its new home, lay out the wood floor according to the manufacturer's recommendations. This will help mitigate the effects of subsequent expansion and contraction. The wood floor manufacturer and installer will help with directions for this process.
4. Install the wood flooring following the manufacturer's guide.

**NOTE: NAILS MAY ONLY BE DRIVEN THROUGH THE WHITE (NAIL STRIP) SECTIONS OF THE HEATING FILM. CHECK WITH YOUR FLOORING MANUFACTURER FOR MAXIMUM TEMPERATURE RATINGS THAT ARE APPROPRIATE FOR YOUR FLOORING AND SET YOUR THERMOSTAT ACCORDINGLY.**

**FLOOR SENSOR (INCLUDED WITH ALL THERMOSTATS) MUST BE PROPERLY INSTALLED.**