


TILE INSTALLATION

(WET AREA)

SLAB OR PLYWOOD SUBFLOOR

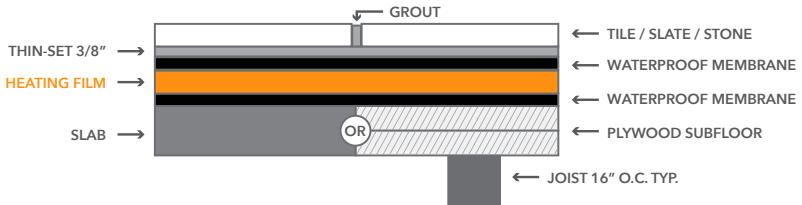

1. Prepare the Heating Film according to the steps in the General Installation Instructions beginning on page #24.
2. Adhere the Heating Film to the slab or sub-floor using a moisture resistant or water proofing indoor/outdoor flooring adhesive by rolling back 1/2 a sheet at a time, using a 3/16"-1/4" (5-6mm) V-notch trowel to apply adhesive to the floor, setting the Heating Film down onto the adhesive. Using a roller, apply a continuous, even pressure with overlapping strokes making a permanent bond between the sub-floor and film.
3. Apply the waterproof membrane to the Heating Film according to the manufacturer's specifications.
4. Follow the manufacturer's recommended drying time for the membrane you use before starting the tile installation.
5. Install the tile on top of the Heating Film using an unmodified thin-set mortar meeting the requirements of ANSI A118.1 to install ceramic and stone tile. (See notes)

**FLOOR SENSOR (INCLUDED WITH ALL THERMOSTATS)
MUST BE PROPERLY INSTALLED.**