


CARPET INSTALLATION

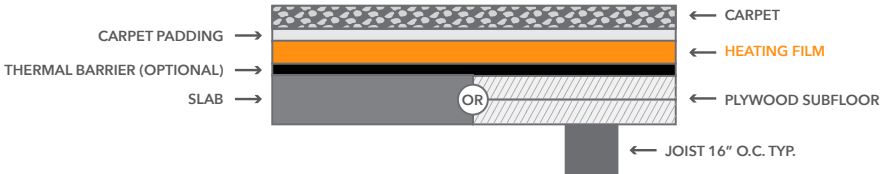

1. Prepare the Heating Film according to the process outlined in the General Installation Instructions beginning on page #24.
2. Install low R-Value carpet pad according to the manufacturer's instructions.
3. Install the carpet according to the manufacturer's instructions.

**FLOOR SENSOR (INCLUDED WITH ALL THERMOSTATS)
MUST BE PROPERLY INSTALLED.**