


# LAMINATE INSTALLATION

## FLOATING FLOOR (WOOD/CORK/LAMINATE)

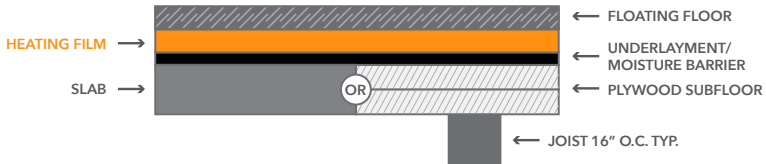

1. Start by laying out the underlayment/moisture barrier that is recommended by the laminate flooring manufacturer. When joining two sheets of underlayment/moisture barrier together, follow the manufacturer's directions. Some manufacturers will have you overlap the underlayment/moisture barrier and some will have you "butt" each row against the previous one.
2. Prepare the Heating Film according to the steps in the General Installation Instructions beginning on page #24.
3. Install the Laminate flooring per manufacturer's installation guide.

**NOTE: CHECK WITH YOUR FLOORING MANUFACTURER FOR MAXIMUM TEMPERATURE RATINGS THAT ARE APPROPRIATE FOR YOUR FLOORING AND SET YOUR THERMOSTAT ACCORDINGLY.**

**FLOOR SENSOR (INCLUDED WITH ALL THERMOSTATS) MUST BE PROPERLY INSTALLED.**